




Honeywell Vista Security Systems Quick Reference

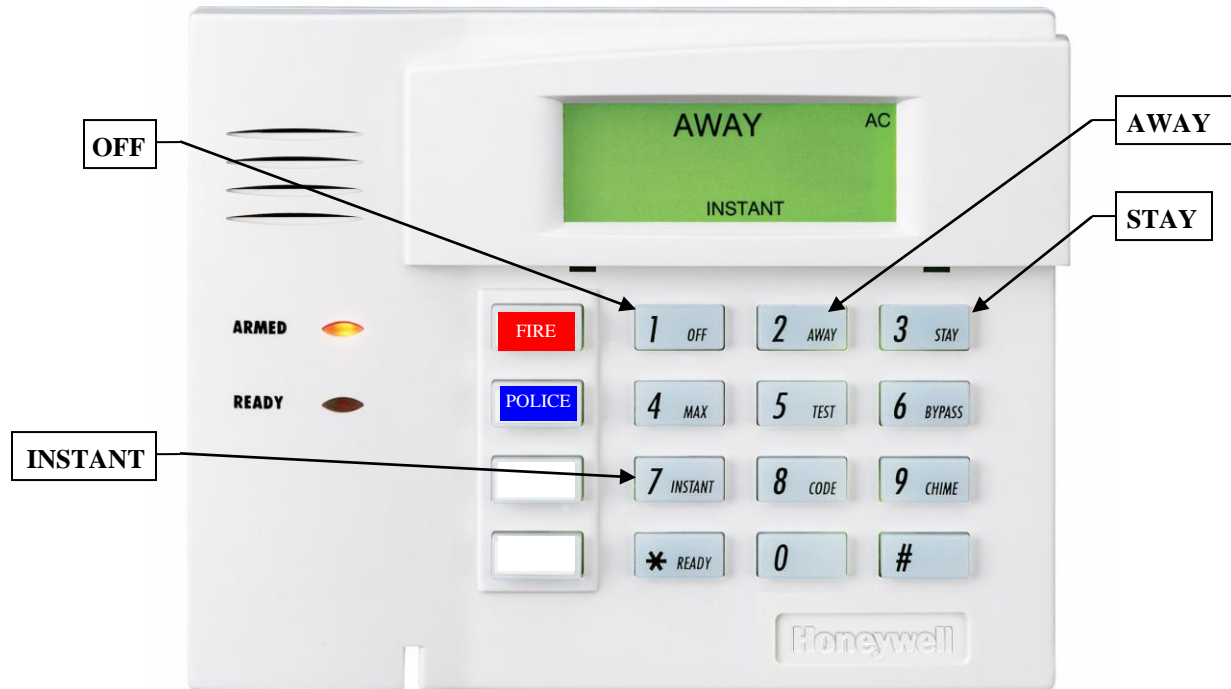

Disarming System

Note: If the alarm is set off, the user must disarm the system two times. The first time silences the system and displays the zone that created the alarm. The second time the system is disarmed clears the alarm condition.

1. Disarm = User Code + OFF Turns System Off

Arming System

Note: To Arm the System, the Ready Light must be illuminated.

1. Arm Away = # AWAY or User Code + AWAY Motion Detector is On
2. Arm Stay = # STAY or User Code + STAY Motion Detector is Off, Entry Delay On
3. Arm Instant = # INSTANT or User Code + INSTANT Motion Detector is Off, Entry Delay Off

Change, Add, Delete Codes

Note: Only User 02 has the authority to change, add or delete codes.

1. Change Code = Existing Code + 8 + user number **02** + new code + new code The 02 is the user number.
2. Add a Code = user 02 Code + 8 + user number (04) + new code This would create a code for user 04.
3. Delete a Code = user 02 code + 8 + user number (04) + #0 This would delete code for user 04.

For more information, please refer to the user manual. Manuals are available for download on our website.