

How Do I Connect My Amazon Echo Dot to Wi-Fi?

The Amazon Echo Dot needs to be connected to Wi-Fi and an Amazon account in order to function properly. You will use the Amazon Alexa app to connect the Dot.



Complete the following steps to connect your Amazon Echo Dot to Wi-Fi:

1. **Logging into the app.** If you haven't already done so, please install the Amazon Alexa app. Open the app on your cellphone or tablet and enter your Amazon credentials. Note: You will need a free Amazon account.

2. **Connect the Echo Dot.** Tap the Settings Menu. Note: The settings menu is the three horizontal bars in the top left.

- 3. Tap Add Device
- 4. Tap Amazon Echo
- 5. Tap Echo Dot
- 6. Tap 3rd Generation

7. Tap Yes if your Echo Dot is plugged in and displaying an orange light. Continue to step 9.

8. Tap No if your Echo Dot is not plugged in or not displaying an orange light. Make sure it is plugged in and then hold the Action button for at least 5 seconds until it says, "now in setup mode" and an orange light comes on. Note: The Action button is the one with just a dot on it.

- 9. Select Echo Dot from the list of available devices
- 10. Select your Wi-Fi network
- 11. Enter your Wi-Fi password
- 12. Tap Continue once your device is connected
- 13. Select the room that you want the Echo Dot in
- 14. Tap Continue or Skip



2004 Henry Parkway Connector McDonough, GA 30253 Phone: 1-866-306-6568 Fax: 770-507-5827 www.KMTSystems.com

- 15. Tap Continue or Skip at the "Teach Alexa your voice" screen
- 16. Select or enter the address where the Echo Dot is located
- 17. Make sure there is a check mark next to the selected address
- 18. Tap Continue
- 19. Select Home or Office for your location
- 20. You are done!